



JK PITMAN ARM FOR 3- 6" LIFT

Thank you for choosing Rough Country for your suspension needs.

▲ NOTICE Please read instructions before beginning installation. Check the kit hardware against the parts list. Be sure you have all needed parts and know where they go. Also please review tools needed list and make sure you have needed tools. If question exist we will be happy to answer any questions concerning the design, function, and correct use of our products by calling 1-800-222-7023.

Parts Included:

1-Pitman Arm



Tools Needed:

Pitman Arm Puller
33mm Socket
21mm Socket / Wrench

INSTALLATION INSTRUCTIONS

1. Using a 21mm socket remove the tie rod end from the pitman arm. Remove the pitman arm nut using a 33mm socket.
2. A pitman arm puller will be needed to remove factory pitman arm. **See Photo 1.**
3. Install the new pitman arm with the stock hardware. Tighten using a 33mm socket. **See Photo 2.**
4. Reinstall the drag link on the new pitman arm with the stock nut and using a 21mm wrench. It might be necessary to use a 1/4+allen wrench to hold stud and tighten.



▲ WARNING POST INSTALLATION

All components must be retightened after 500 miles, and every three thousand miles after installation.

Thank you for using Rough Country Suspension for your off road needs!!

