

## Thank you for choosing Rough Country for all your off road needs.

**NOTICE** Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning the design, function, and correct use of our products.



Only fits 2011-2015 Ford Super Duty models.

## **Tools Needed:**





Kit Contents: 1-Rough Country LED Light Bracket

1-70524BAG containing: 2- 5/16" x.75" Button Head Allen Bolt 2- 5/16" Flange Locknuts 2- 1/2" x 1.25" Bolts 2- 1/2" Nylon Locknuts

## **INSTALLATION INSTRUCTIONS**


1. Install light bracket in opening of front bumper. Using supplied 5/16" x .75" bolts and flange locknuts, bolt bracket to upper rear holes of bumper. Hand tighten. See Photos 1 & 2.







- 2. Place 1/2" bolts through bracket and bumper flange. Tighten using 3/4" wrench. (Use a 1/2" washer on bottom of bracket and top of flange) **See Photo 3.**
- 3. Tighten rear Allen bolts using 3/16" Allen and 1/2" wrench. See Photo 4.

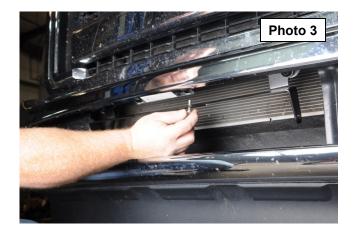



- 5. Insert light in bumper opening and place in bracket. See Photo 5.
- 6. Set desired light angle and tighten 8mm bolts. See Photo 6.





## Thank You for choosing Rough Country for your lighting needs!!!



By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable Federal, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.